


# AIR21 (esploso)

FOTO N° 1

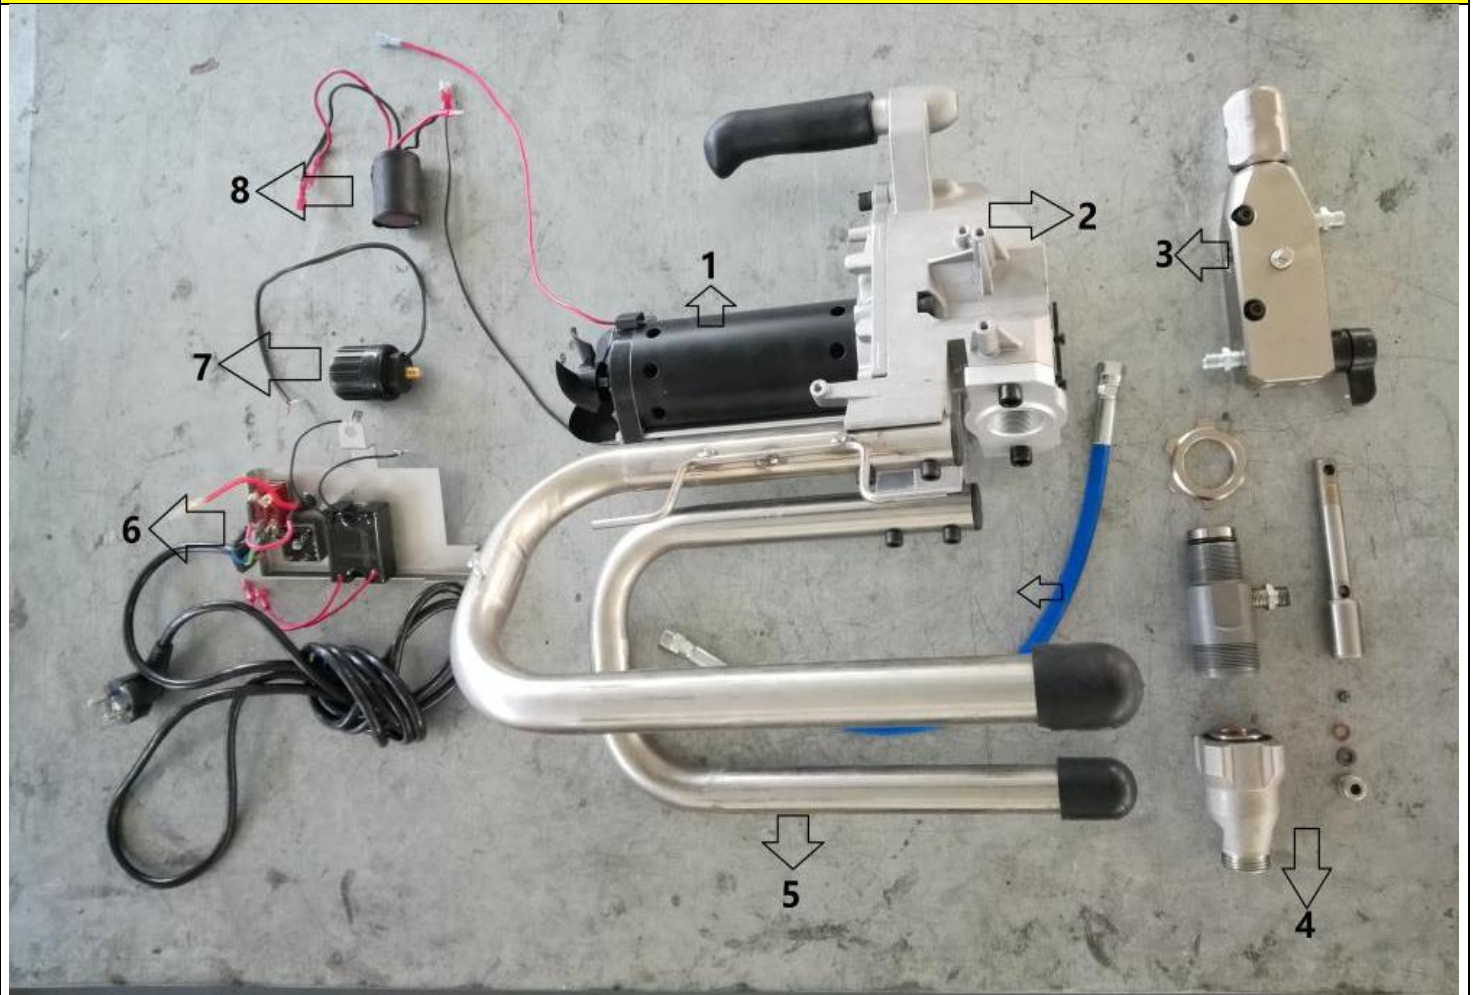

	Part No.	Description			ART. FIXLINE
1	23204	Motor Assembly			RAIR21-F1-1
2	106/108	Gear and housing			RAIR21-F1-2
3	111	Manifold			RAIR21-F1-3
4	23209	Pump assembly			RAIR21-F1-4
5	115	Rack assembly			RAIR21-F1-5
6	23213	Control board			RAIR21-F1-6
7	120	Potentiometer			RAIR21-F1-7
8	121	Capacitance			RAIR21-F1-8

# AIR21 (esploso)


FOTO N° 2



Part No	Description			ART. FIXLINE
1	Hose suction kit			<b>RAIR21-F2-1</b>
2	suction filter			<b>RAIR21-F2-2</b>
3	drain hose			<b>RAIR21-F2-3</b>

# AIR21 (esploso)


FOTO N° 3

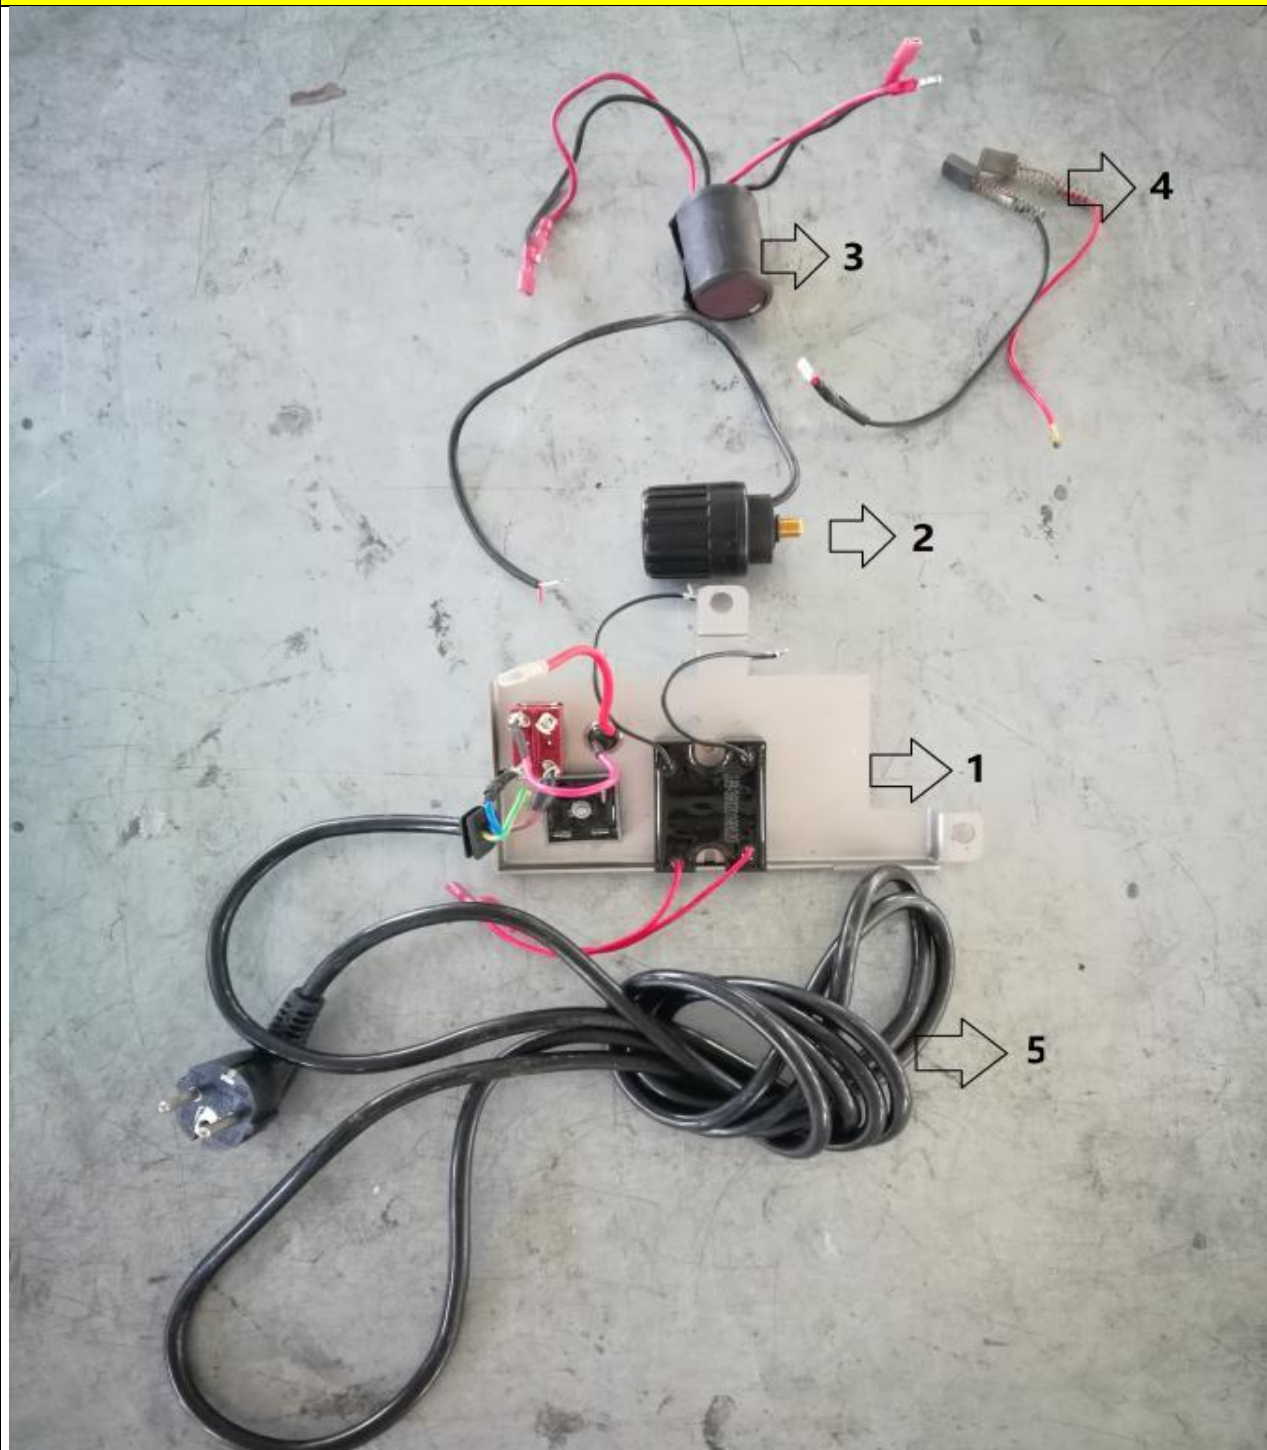

Part No	Description			ART. FIXLINE
1	Control board with aluminium panel			RAIR21-F3-1
2	Potentiometer Assembly			RAIR21-F3-2
4	carbon brush			RAIR21-F3-4

# AIR21 (esploso)


FOTO N° 4

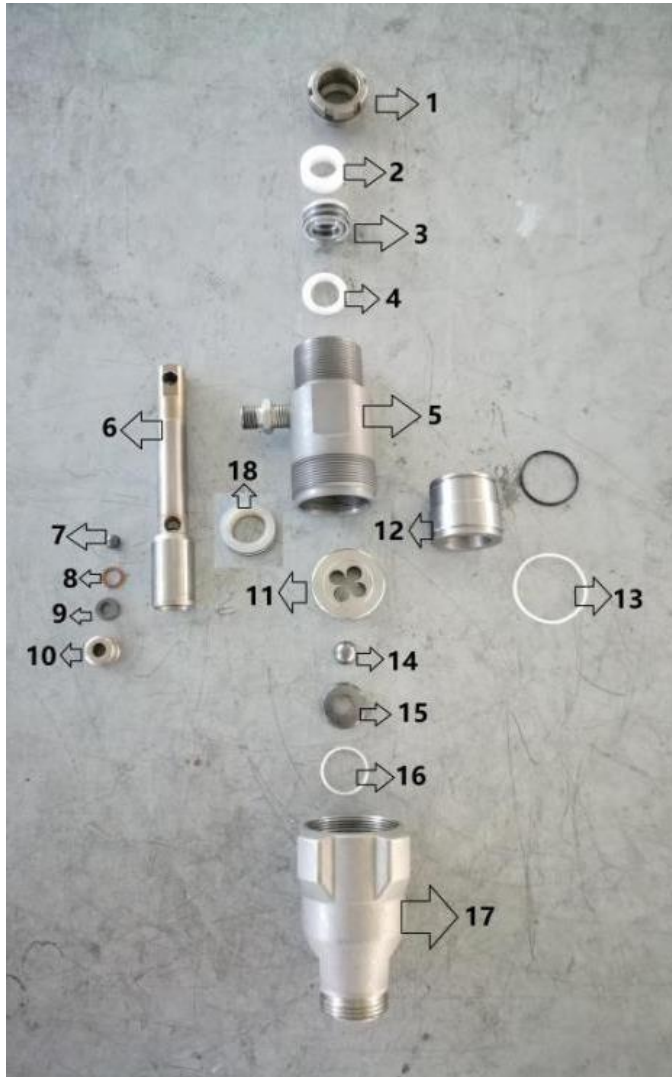

Part No	Description		Art. FIXLINE
1	gland		RAIR21-F4-1
2/ 3/ 4/ 7/ 8/ 9/ 13/ 14/ 15/ 16/ 18	repair kit		H-HB69109
5	upper cylinder		RAIR21-F4-5
6	Piston rod		RAIR21-F4-6
6 7 8 9 10	Piston rod assembly		RAIR21-F4-6-10
10	Piston valve		RAIR21-F4-10
11	Ball Guide		RAIR21-F4-11
12	Middle cylinder		RAIR21-F4-12
15	ball seat		RAIR21-F4-15
17	Intake housing		RAIR21-F4-17
1-17	Pump Assembly		RAIR21-F4-1-17

# AIR21 (esploso)

FOTO N° 5

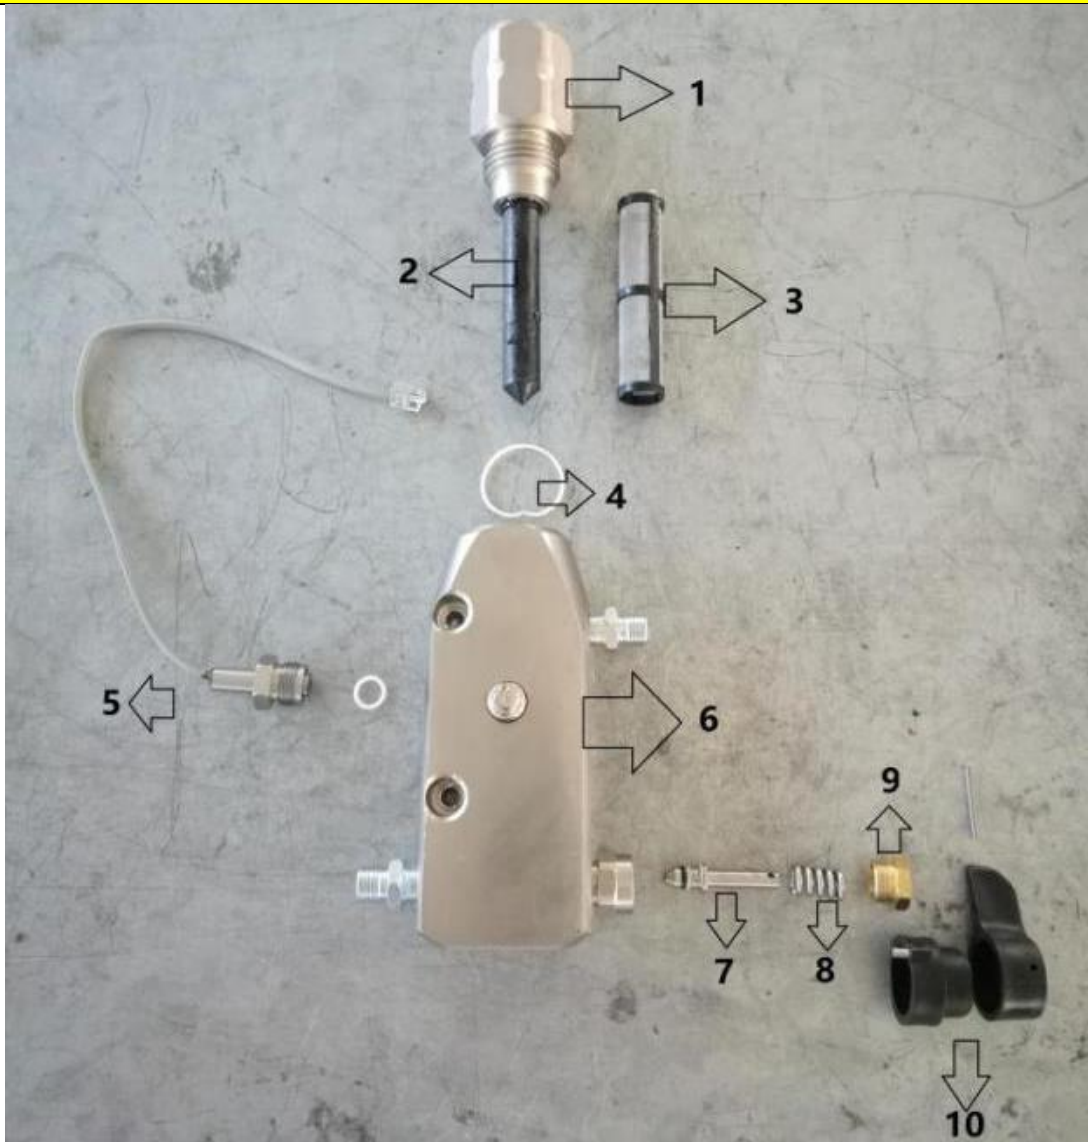

Part No	Description			Art. FIXLINE
1	manifold cap			RAIR21-F5-1
2	filter tube			RAIR21-F5-2
3	filter			RAIR21-F5-3
4	o-ring			RAIR21-F5-4
5	transducer			RAIR21-F5-5
6	manifold			RAIR21-F5-6
7.8.9.10	Prime valve+knob			RAIR21-F5-7