

AIR27 (esploso)

FOTO N° 1



Part No	Description	ART. FIXLINE
8	big gear	RAIR27-F1-8
8/B	small gear	RAIR27-F1-8/B
2	front cover	RAIR27-F1-2
3	motor cover	RAIR27-F1-3
5	Connecting rod	RAIR27-F1-5
6	housing	RAIR27-F1-6
14	side cover	RAIR27-F1-14
4	motor	RAIR27-F1-4

AIR27 (esploso)


FOTO N° 2



Part No	Description			ART. FIXLINE
1	Hose suction kit			RAIR27-F2-1
2	suction filter			RAIR27-F2-2

AIR27 (esploso)


FOTO N° 3

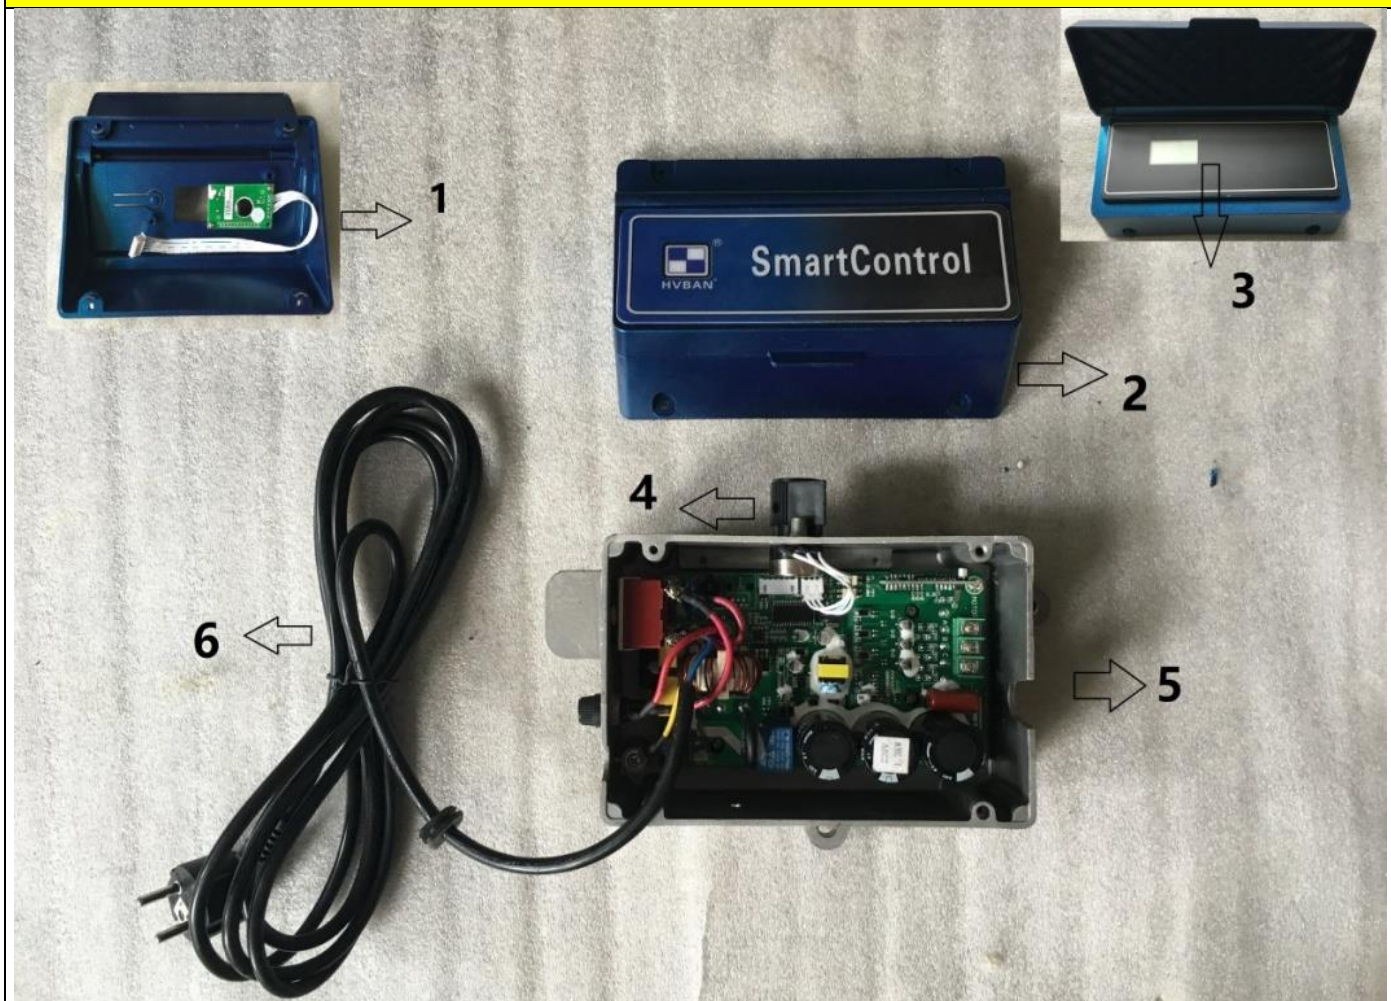

Part No	Description			ART. FIXLINE
1	LED display			RAIR27-F3-1
4	Pressure control knob			RAIR27-F3-4
5	Control board with aluminium panel			RAIR27-F3-5

AIR27 (esploso)


FOTO N° 4

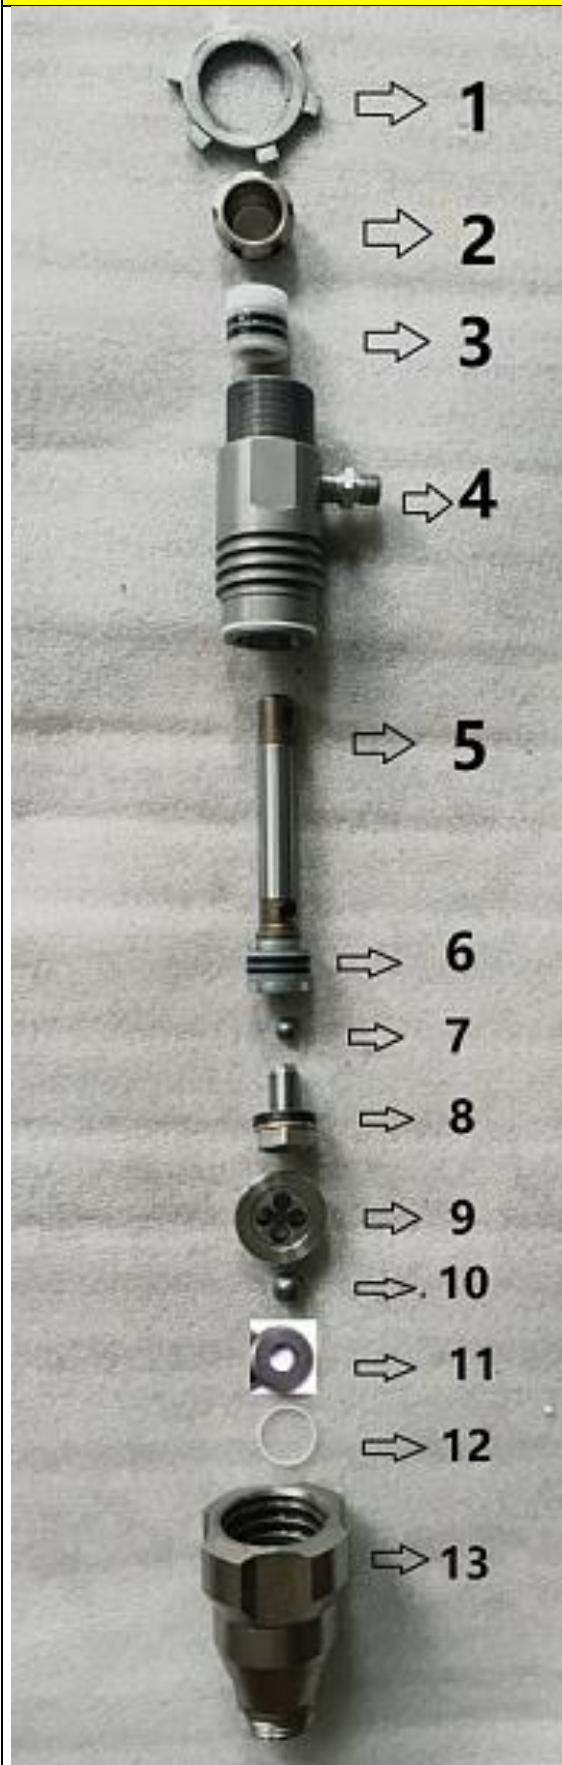

Part No	Description	EP270	Art. FIXLINE
1	nut		RAIR27-F4-1
2	gland		RAIR27-F4-2
3/6/7/10/ 12	Repair kit		H-HB29008
4	ceramic Cylinder		RAIR27-F4-4
5	ceramic Piston rod		RAIR27-F4-5
8	Piston valve		RAIR27-F4-8
9	ball guide		RAIR27-F4-9
11	ceramic ball seat		RAIR27-F4-11
13	Intake housing		RAIR27-F4-13
1-13	Pump Assembly		RAIR27-F4-1/13

AIR27 (esploso)

FOTO N° 5

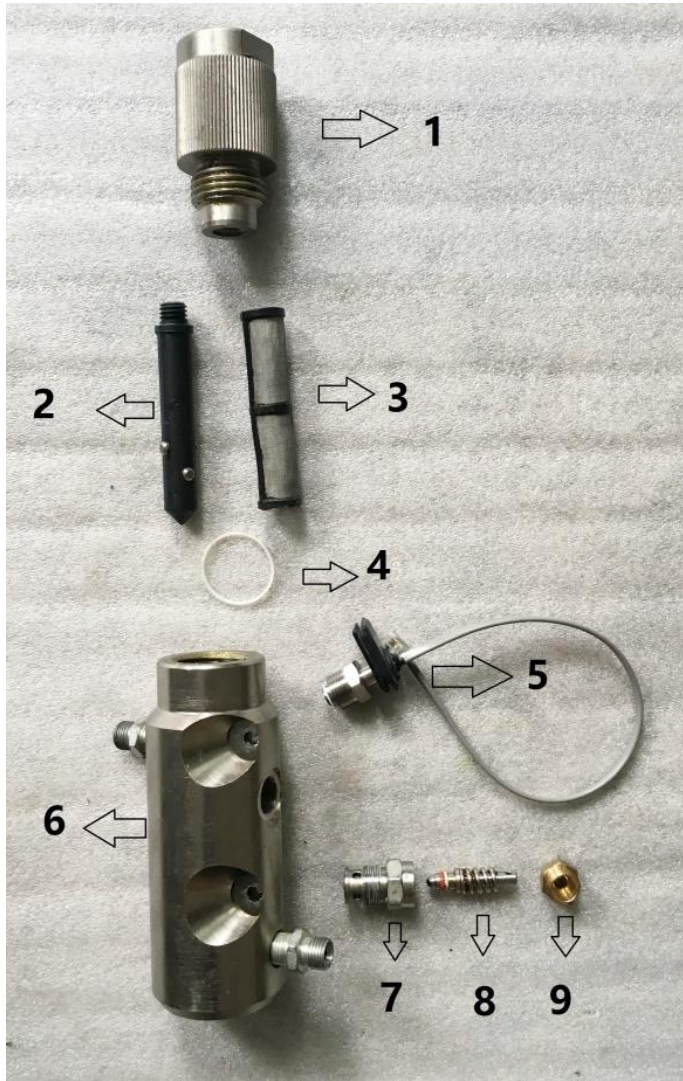

Part No	Description		ART. FIXLINE
1	manifold cap		RAIR27-F5-1
2	filter tube		RAIR27-F5-2
3	filter		RAIR27-F5-3
4	o-ring		RAIR27-F5-4
5	transducer		RAIR27-F5-5
6	manifold		RAIR27-F5-6
7	Prime valve+knob		RAIR27-F5-7