


AIR60(esploso)


FOTO N° 1

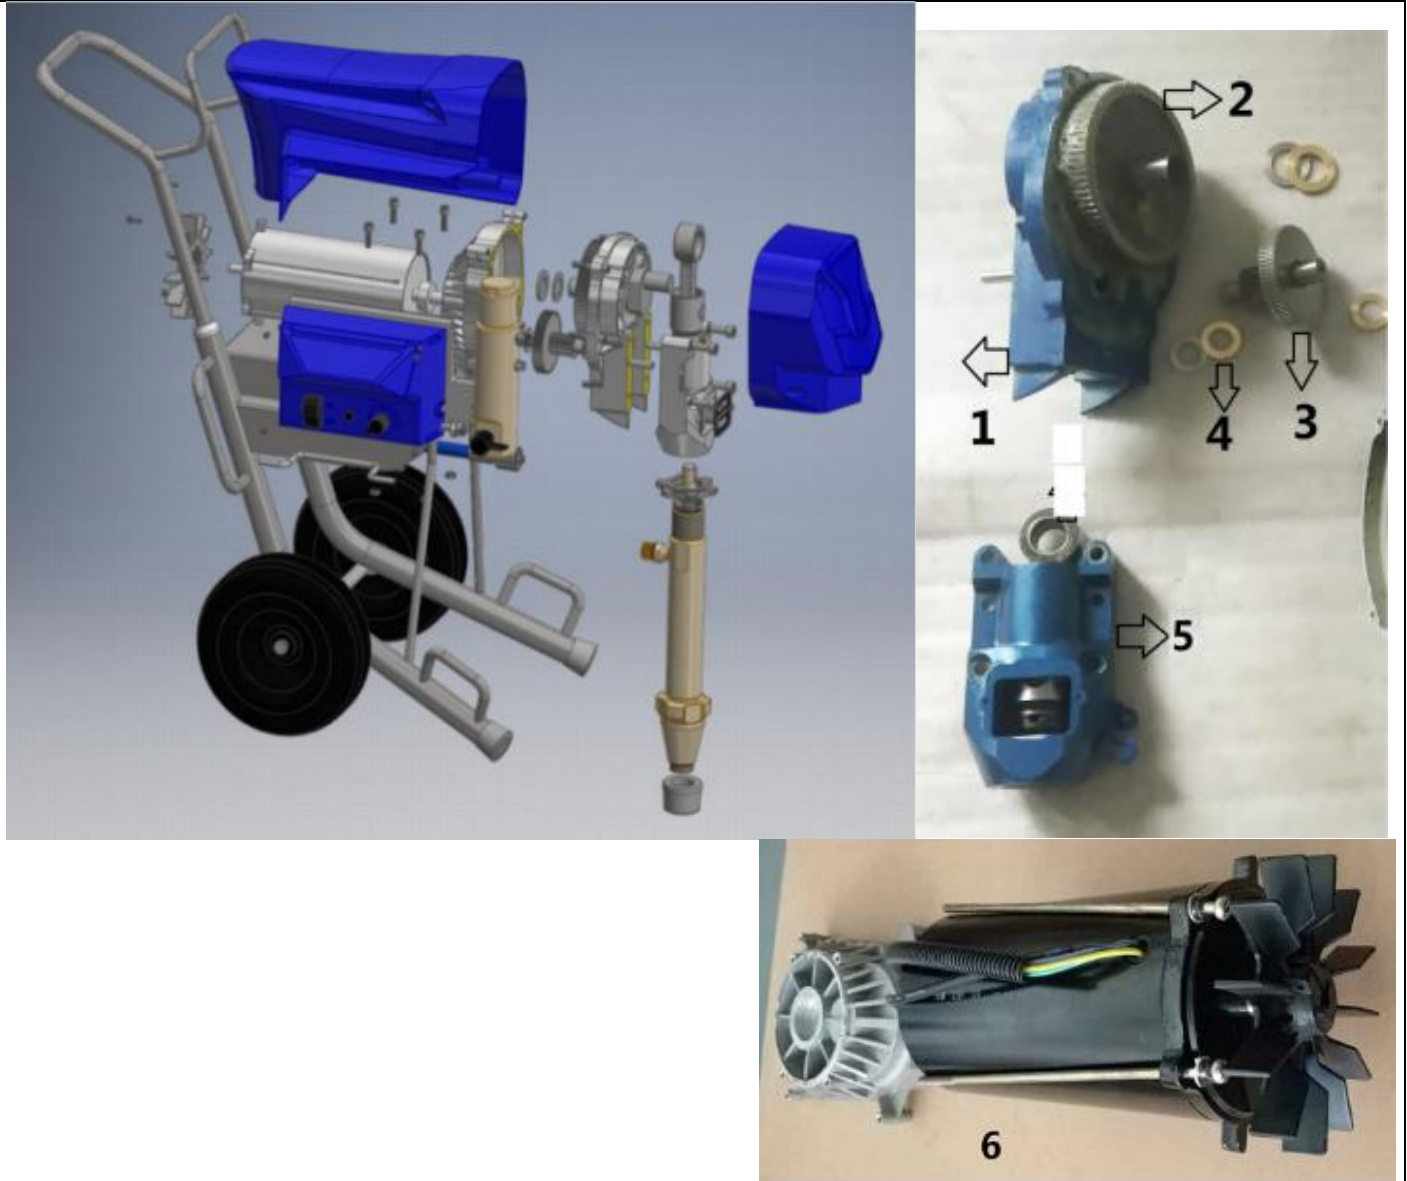

Part No	Description			Art. FIXLINE
1	drive housing assembly			RAIR60-F1-1
2	gear			RAIR60-F1-2
3	gear			RAIR60-F1-3
4	washer			RAIR60-F1-4
5	Connecting rod			RAIR60-F1-5
6	motor			RAIR60-F1-6

AIR60_(esploso)

FOTO N° 2

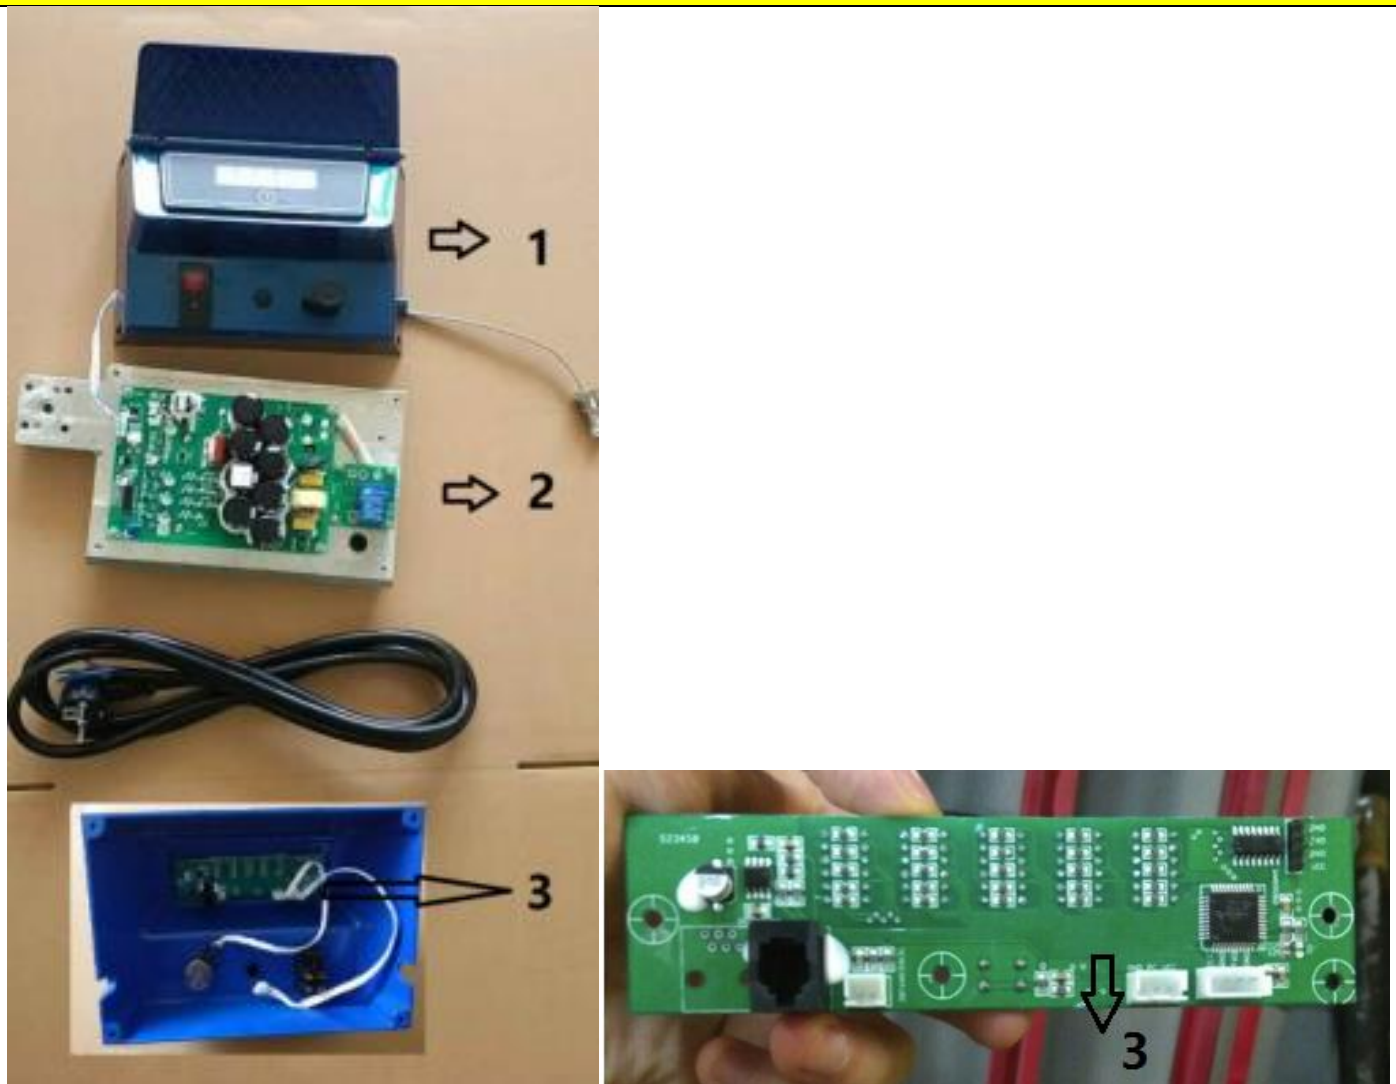

Part No	Description			ART. FIXLINE
1	Control broad cover			RAIR60-F2-1
2	Display board			RAIR60-F2-2
3	Control board with aluminium panel			RAIR60-F2-3

AIR60(esploso)

FOTO N° 3



Part No	Description		ART. FIXLINE
1	Piston rod		RAIR60-F3-1
2/ 4/ 6/ 7/ 11/ 12/ 14/ 16	Repair kit		H-HB29040
3	sleeve		RAIR60-F3-3
4	Piston valve		RAIR60-F3-4
5	nut		RAIR60-F3-5
8	nipple		RAIR60-F3-8
9	cylinder		RAIR60-F3-9
10	nut		RAIR60-F3-10
13	guide		RAIR60-F3-13
15	ball seat		RAIR60-F3-15
17	Intake housing		RAIR60-F3-17
18	Strainer filter		RAIR60-F3-18
19	pump assembly		RAIR60-F3-19

AIR60(esploso)

FOTO N° 4



Part No	Description			Art. FIXLINE
1	manifold cap			RAIR60-F4-1
2	filter tube			RAIR60-F4-2
3	filter			RAIR60-F4-3
4	o-ring			RAIR60-F4-4
5	nipple			RAIR60-F4-5
6	manifold			RAIR60-F4-6
7	Prime valve+knob			RAIR60-F4-7
8	nipple			RAIR60-F4-8